



## travel bottle warmer


### INSTRUCTIONS FOR USE

Please read and retain this important information for future reference.

This travel bottle warmer is designed for use with tommee tippee closer to nature bottles and baby food jars.

#### PARTS GUIDE (see diagram)

- A. Insulated Flask
- B. Screw cap and pourer
- C. Open/close button
- D. Beaker
- E. Silicone seal

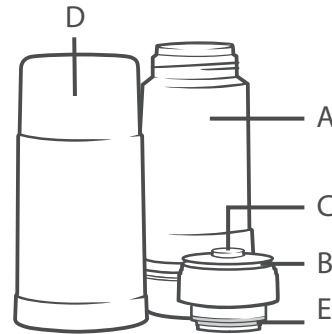

#### USING THE TRAVEL BOTTLE WARMER



1. Unscrew and lift off beaker.



2. Unscrew screw cap and inspect silicone seal to make sure it is securely in place and intact to prevent leakage.



3. Pour a maximum of 500ml of freshly boiled water into the flask.



4. Replace screw cap. Twist until secure.



5. To open pourer, press button in centre of screw cap down.



6. Place bottle in beaker.



7. Pour water out of the insulated flask into the beaker. Never let the water rise above the neck of the bottle. To close pourer press button again. It is closed when slightly raised.

8. Heat the milk to the desired temperature.

9. Take care when removing the bottle, as it and the surrounding water will be hot.

10. In between feeding, the bottle can be placed back in the warmer in order to maintain drinking temperature.

11. Always check food temperature before feeding by testing on a sensitive part of your skin.

#### CLEANING THE INSULATED FLASK

- The container should be periodically cleaned. The best results are obtained using a mixture of water and bicarbonate of soda or washing up liquid. Rinse thoroughly afterwards.
- Never use in a dishwasher.

#### CLEANING THE BEAKER

- Wash in warm soapy water and rinse in clean water or use a dishwasher. Do not clean with solvents or harsh chemicals.

#### WARNING!

- Do not use to store or carry carbonated drinks.
- In order to minimise bacterial growth, do not use to keep warm milk products or baby food.
- Pre-heat or pre-cool the container with water to ensure efficient use. Never use microwave or conventional ovens for this purpose.
- **WARNING:** Flask can contain boiling water - a potential scalding hazard. Ensure lids are securely fastened. Open with care. Keep out of reach of children.
- Always use on a flat, heat-resistant surface.
- Always place bottle or food jar into the beaker before adding water.
- Empty beaker immediately after use.
- Children should be supervised to ensure that they do not play with this appliance. Always keep out of the reach of children.
- When the feed has reached the desired temperature, remove immediately. If left in the warmer, the temperature of the feed will continue to increase.

Jackel International Limited trading as Mayborn Group.

Northumberland Business Park West, Cramlington, Northumberland NE23 7RH, UK. Copyright © Jackel International Limited 2016.

TOMMEE TIPPEE is a registered trademark of Jackel International Limited.